

AC/DC current monitoring in 1-phase mains

Monitoring relays - GAMMA series

Multifunction

16.6 to 400Hz

Fault latch

Supply voltage selectable via power modules

1 change-over contact

Width 22.5mm

Industrial design



Technical data

1. Functions

AC/DC current monitoring in 1-phase mains with adjustable thresholds, timing for start-up suppression and tripping delay separately adjustable, fault latch and the following functions which are selectable by means of rotary switch

OVER Overcurrent monitoring UNDER Undercurrent monitoring

WIN Monitoring the window between Min and Max

2. Time ranges

Start-up suppression time: Os 10s
Tripping delay: 0.1s 10s

3. Indicators

Green LED ON: indication of supply voltage Green LED flashes: indication of start-up suppression time

Yellow LED ON/OFF: indication of relay output
Red LED ON/OFF: indication of failure of the corresponding

threshold

Red LED flashes: indication of tripping delay

of the corresponding threshold

4. Mechanical design

Self-extinguishing plastic housing, IP rating IP40 Mounted on DIN-Rail TS 35 according to EN 60715

Mounting position: any

Shockproof terminal connection according to VBG 4 (PZ1 required),

IP rating IP20

Tightening torque: max. 1Nm

Terminal capacity:

1 x 0.5 to 2.5 mm $^{\circ}$ with/without multicore cable end

1 x 4mm² without multicore cable end

2 x 0.5 to 1.5mm² with/without multicore cable end

2 x 2.5mm² flexible without multicore cable end

5. Input circuit

Supply voltage:

12 to 400V AC terminals A1-A2 (galvanically separated) selectable via power modules TR2

Tolerance: according to specification of power module Rated frequency: according to specification of power module

Rated consumption: 2VA (1.5W)
Duration of operation: 100%
Reset time: 500ms

Residual ripple for DC:

Drop-out voltage: >30% of the supply voltage
Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage: 4kV

6. Output circuit

1 potential free change-over contact Rated voltage: 250V AC

Switching capacity: 750VA (3A / 250V AC)
If the distance between the devices is less than 5mm!
Switching capacity: 1250VA (5A / 250V AC)
If the distance between the devices is greater than 5mm!

Fusing: 5A fast acting
Mechanical life: 20 x 10⁶ operations
Electrical life: 2 x 10⁵ operations
at 1000VA resistive load

Switching frequency: max. 60/min at 100VA resistive load

max. 6/min at 1000VA resistive load (in accordance with IEC 60947-5-1) III (in accordance with IEC 60664-1)

Overvoltage category: III (i Rated surge voltage: 4kV

7. Measuring circuit

Measured variable: DC or AC Sinus (16.6 to 400Hz)

Input:

100mA AC/DC terminals K-I1(+) 1A AC/DC terminals K-I2(+)

10A AC/DC terminals K-I3(+) (distance >5mm)

Overload capacity:

100mA AC/DC 800mA 1A AC/DC 3A 10A AC/DC 12A

Input resistance:

100mA AC/DC 470mΩ 1A AC/DC 47mΩ 10A AC/DC 5mΩ

Switching threshold

 $\begin{array}{lll} \text{Max:} & 10\% \text{ to } 100\% \text{ of } \text{I}_{\text{N}} \\ \text{Min:} & 5\% \text{ to } 95\% \text{ of } \text{I}_{\text{N}} \end{array}$

Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage: 4kV

8. Control contact Y (equipotential with measuring circuit)

Function: fault latch (Y1-Y2 bridged)
Loadable: No
Line length Y1-Y2: max. 10m (twisted pair)

Control pulse length: -

Reset: normally closed contact in the input circuit

9. Accuracy

Base accuracy: ≤3% (of maximum scale value)
Frequency response: -10% to +5% (16.6 to 400Hz)
Adjustment accuracy: ≤5% (of maximum scale value)

Repetition accuracy: ≤2% Voltage influence: -

Temperature influence: ≤0.05% / °C

10. Ambient conditions

Ambient temperature: -25 to +55°C (in accordance with IEC 60068-1)
-25 to +40°C (in accordance with UL 508)

Storage temperature: -25 to +70°C
Transport temperature: -25 to +70°C
Relative humidity: -25 to +70°C
15% to 85%

(in accordance with IEC 60721-3-3 class 3K3)

Pollution degree: 3 (in accordance with IEC 60664-1)

Vibration resistance: 10 to 55Hz 0.35mm

(in accordance with IEC 60068-2-6)

Shock resistance: 15g 11ms (in accordance with IEC 60068-2-27)


Functions

When the supply voltage U is applied, the output relay switches into on-position (yellow LED illuminated) and the set interval of the start-up suppression (START) begins (green LED U flashes). Changes of the measured current during this period do not affect the state of the output relay. After the interval has expired the green LED is illuminated steadily. For all the functions the LEDs MIN and MAX are flashing alternating, when the minimum value for the measured current was chosen to be greater than the maximum value.

Overcurrent monitoring (OVER)

When the measured current exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated), when the measured current falls below the value adjusted at the MIN-regulator (red LED MAX not illuminated).


If the fault latch is activated (bridge Y1-Y2) and the measured current remains above the MAX-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current falls below the value adjusted at the MIN-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

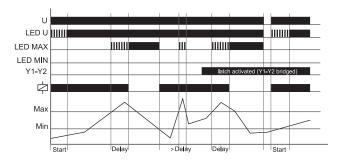

Undercurrent monitoring (UNDER)


When the measured current falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated), when the measured current exceeds the value adjusted at the MAX-regulator.

If the fault latch is activated (bridge Y1-Y2) and the measured current remains below the MIN-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current exceeds the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

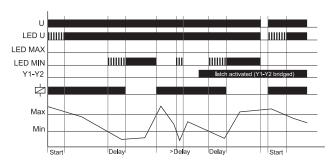


Window function (WIN)

The output relay switches into on-position (yellow LED illuminated) when the measured current exceeds the value adjusted at the MIN-regulator. When the measured current exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated) when the measured current falls below the value adjusted at the MAX-regulator (red LED MAX not illuminated). When the measured current falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins again (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relay switches into off-position (yellow LED not illuminated).

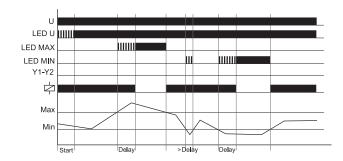


If the fault latch is activated (bridge Y1-Y2) and the measured current remains below the MIN-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current exceeds the value adjusted at the MIN-regulator. If the measured current remains above the MAX-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current falls below the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

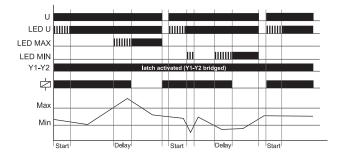


Connections


Range 100mA with power modul 24V AC and fault latch

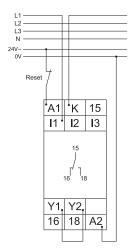

Range 1A with power modul 230V AC and fault latch

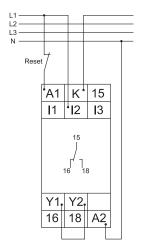

Range 10A with power modul 400V AC without fault latch

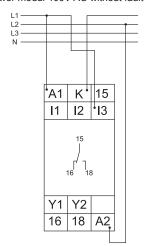

Dimensions

